
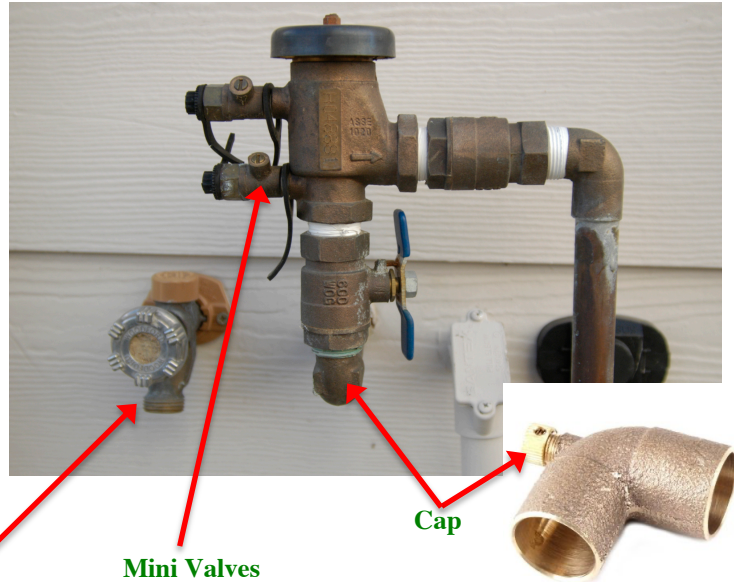


# Jetski Sprinklers 719-661-6526

## Quick Drain

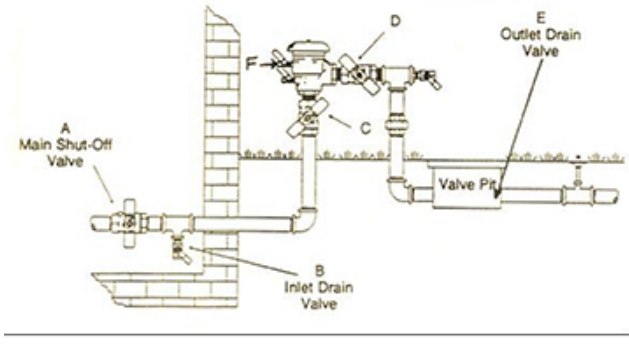

**Disconnect your hose from the spigot**

**Mini Valves**


**Cap**

1. The first step is to shut off the Main Water Valve (A) inside your house. Usually this is in the furnace/maintenance room but can be in a crawl space, ceiling or closet. **If Jetski Sprinklers worked on your system typically there is a lime green tag with “Sprinkler Shut Off” on it** or if not follow the main water line coming into the house from ground and find the sprinkler line that tees off. Turn the valve handle opposite the pipe.

After that check to make sure you have running water in the house from a sink or shower. If you do then you turned off the correct valve.

2. Second, go to your valve box outside and open the Drain Valve (E) at the end of the line/pipe. If you have this it will have some kind of handle. Some valve boxes don't have a drain so if you don't skip to step 3.

3. Next with a flat head screwdriver open the two mini valves (F). **Open Mini Valves**

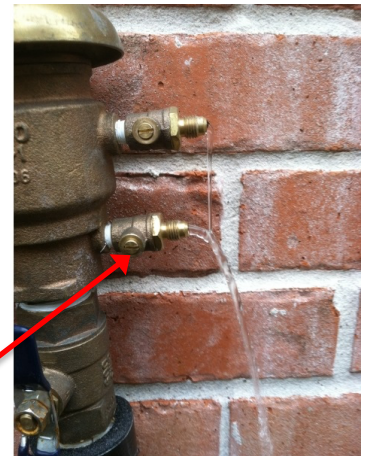

4. Sometimes there is a **Cap** screwed on the copper elbow coming out of the house. Twist that off to drain as well. Tape the cap to the backflow so you don't lose it.

5. Lastly, return inside, place a small bucket under the Drain Valve (B) and proceed to open it, draining any remaining water into the bucket. The drain valve can be a lever, handle or a **Cap** that you unscrew. If you don't have one have a plumber install one.

**To turn the Sprinkler System back on, reverse the steps.**

1. Starting outside, close the Outlet Drain Valve (E) and the two mini valves (F).
2. Proceed inside and close the Inlet Drain Valve (B).
3. Now you can turn on the Main Water Valve inside.